



# Aarons Amusements

(Harnden Holdings Pty Ltd T/A)  
ABN: 46 132 886 590

1300-1-CASTLE / 1300-122-785  
hire@aaronsamusements.com.au  
www.AaronsAmusements.com.au  
PO Box 1050, Bacchus Marsh, VIC 3340

## SLUSHIE/COCKTAIL MACHINE OPERATING INSTRUCTIONS



Image 1



Image 2



Image 3

1. Start by ensuring that the Slushie Machine is on a secure surface. Once filled, the Slushie Machine is quite heavy.
2. Please ensure the Slushie Machine is switched off before filling.
3. Pour the bottle of Flavour Syrup (Image 3) into the Slushie Machine bowl. One bottle of Flavour Syrup per bowl. Then, using the empty Flavour Syrup bottle, pour 4 bottles of water into each bowl.
4. If making an alcoholic mix, use the following ratio. 1 part Flavour Syrup, 3 parts water, 1 part alcohol. A general rule we like to use is just add 2 bottle of alcohol.

### 5. IMPORTANT SETTINGS

**Daytime Setting** – Set both switches in Image 2 to number 1. This will decrease the temperature of freezing as it is hotter during the day.

**Night Time Setting** – Set both switches in Image 2 to number 2. This will increase the freezing temperature as it is colder at night.

6. Twin Bowl Slushie Machine freeze time is approximately 1 hour. Refill freeze time is approximately 30 minutes.
7. Single Bowl Slushie Machine freeze time is approximately 1.5 hours. Refill freeze time is 30 to 45 minutes.
8. Place the cup underneath the tap and pull the lever down to expel the slushie mixture. Giving the cup a slight tap on the drip tray will allow the mixture to settle in order to make room for more in the cup.
9. Please do not use the machine when there are no ingredients in the bowls.

### FAQ's

#### Why is my Slushie Mix frozen solid?

This is because you have the machine on Daytime Setting 1 and the outside temperature is too cold, or it is nighttime. Put the setting for each bowl on Night Time Setting 2 and the Slushie should thaw.

#### Why is my Slushie Mix not freezing?

This is because the machine is on Night Time Setting 2 and the outside temperature is too hot, or it is day time. Put the setting on Day Time Setting 1 for each bowl.

**THE MACHINE IS NOT INSURED AND IS THE SOLE RESPONSIBILITY OF THE PERSONS HIRING IT FOR SAFE RETURN. LOSS OR DAMAGE IS YOUR RESPONSIBILITY. PLEASE ENSURE ALL NON-CONSUMABLE ITEMS ARE RETURNED.**

